



PET Felt Cleaning Guide

Keep it clean!

DeFelt PET is an absorbent material and traps dirt, grime and debris just as well as it does sound. White glove handling is recommended for prep, processing and installation. DeFelt is not responsible for mishandling on the job site.

Keep it flat!

If cutting, drilling or mounting hardware on site, make sure that DeFelt PET is evenly supported on a flat, clean surface. Improperly handled material can crease. Storage areas should be clean, dry, cool, and well ventilated.

All DeFelt PET is inspected prior to shipment. DeFelt is not responsible for damage in shipment or in storage; customers should carefully inspect all items at time of delivery and note any obvious damage on the delivery receipt. For the customer's protection subsequently discovered concealed damage must be reported immediately to the carrier. Claims to DeFelt will not be considered if the sheet has been worked by the customer or others. No claims for labor charges will be allowed in any circumstances.

⚠ To handle and store DeFelt PET properly, follow these guidelines:

- Carefully inspect all material at time of delivery and note any obvious damage on the delivery receipt.
- Keep DeFelt PET as clean as possible during storage. PET should be kept free from grease, wax, dust, and chips that could leave impression.
- Store DeFelt PET indoors, in a dry, cool, well-ventilated area.
- Avoid exposure to heat exceeding 65°C or greater.
- Keep table tops clean to avoid scratching.
- Inspect for defects, then recover for protection during fabrication.

⚠ Don't forget about:



Wear gloves for handling light colors.



Keep product dry and avoid humidity.



Store in a cool, dry place with no direct sun.
Avoid 65°C temp. or greater.

Remove dust and dirt by dusting, vacuuming, or using a soft cloth or sponge with a solution of carpet or upholstery shampoo. Always use a soft, damp cloth and blot dry. Light spot cleaners have proven effective for addressing light soil situations. However, there are no assurances provided regarding the cleaning outcomes when using these products.

Regular Cleaning

- Vacuum regularly using low suction & smooth attachment.
- Professional cleaning recommended.
- Do not use dishwashing or laundry detergents, only use upholstery detergent.
- Allow to dry away from direct heat thoroughly before re-use.



Spot Cleaning

- Treat spills and stains as soon as possible.
- Avoid concentrated rubbing & use minimal pressure only.
- Gently scrape soil or mop liquid from the surface of the fabric, do not scrub.
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill.
- Dry cleaning solvent can be used for spot cleaning.
- Ensure adequate ventilation if the product is likely to be subject to excessive moisture.



In the EU, use EPA registered household disinfectants like chlorine-based bleach with Sodium Hypochlorite or minimum 70% alcohol solutions/wipes. Dilute household bleach to 0.1% (1 part bleach to 39 parts water for 4.0% Chlorine). Wear PPE (gloves, eyewear) when handling disinfectants per EU safety standards.




Please note that using chlorine-based household bleach or alcohol solutions as disinfectants can potentially cause deterioration of PET felt sheets over time. PET (polyethylene terephthalate) is a synthetic fiber that is generally resistant to chemicals and has good durability. However, prolonged exposure to strong chemicals like bleach or alcohol can affect its appearance, texture, and structural integrity.



Please note that DeFelt cannot be held liable for any loss or damage resulting from the improper use of cleaning or disinfectant products on PET felt sheets. It is essential to follow manufacturer instructions for cleaning agents and to use them in accordance with recommended guidelines to maintain the quality and longevity of your PET felt products.

Use of Alcohol Wipes

Using a disposable alcohol wipe (min 70% alcohol), wipe the cleaned surface of DeFelt PET. Sufficient time is required to kill the virus, i.e., at least 10 minutes contact time.

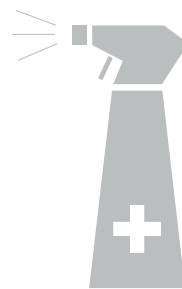

Preparation & Use of Bleach Solution

Bleach solutions should be made up daily using manufacturer's instructions for appropriate dilution and use. Using a disposable paper towel or cloth, wipe the cleaned



Intertek



intertek
Total Quality. Assured.



Certified by Control Union
CU847999



DeFelt®

**Do you have any questions?
Contact us!**

www.defelt.com

+48 571 494 911

contact@defelt.com

2025
All rights reserved